


Number Plate Fixing Kit Instructions

Upon delivery please ensure that you place the tape in a room and leave for 12 - 24 hours to re-adjust, this allows the adhesive to acclimatise especially important during cold weather.

Remove all debris from both the vehicle and number plates to be fitted, once clean use supplied wipes to ensure that no oily residue is left after cleaning, allow the alcohol to evaporate.

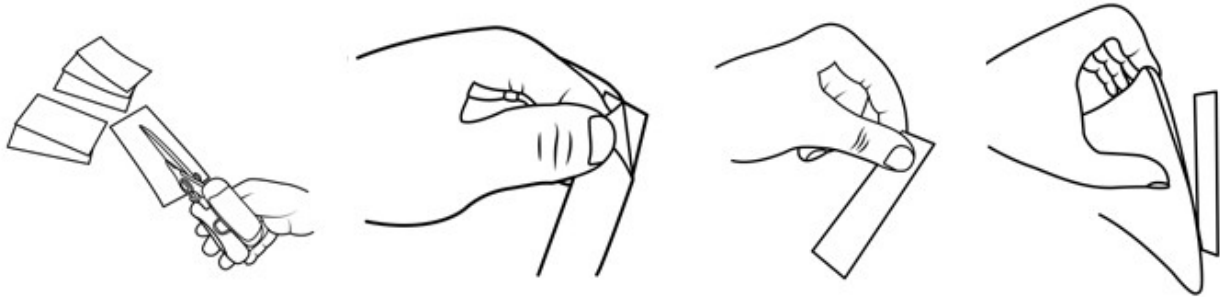

Cut the ULTRAMATE® tape to required size (cutting lengthways is one of the best options so you are left with two strips at 25mm wide) or use as-is, nip or round each corner, peel release paper and firmly press into place on the vehicle where the plates will attach paying particular attention to the edges. It does not matter what side you apply the to vehicle, however best results are by using the hook side to the vehicle and loop side for the number plates.

Now leaving the release paper on the opposite side tape and after cutting to size and nipping the corners place the loop onto the hook you have applied to the vehicle, with each piece in place peel off the release paper and push the number plate onto the tape, this allows you to be 100% accurate with the tapes meeting each other, however at the same time ensure the plates are aligned correctly to the vehicle.

Do not attempt to remove the plates for a minimum of 24 hours (longer in poor weather conditions) in order to allow the adhesive to fully cure.



01767 222367

www.hookandloopfasteners.co.uk

